





623417M DiscoverSounds® Activity Garden™

632624M Activity Garden™


Replacement instruction for play centre base

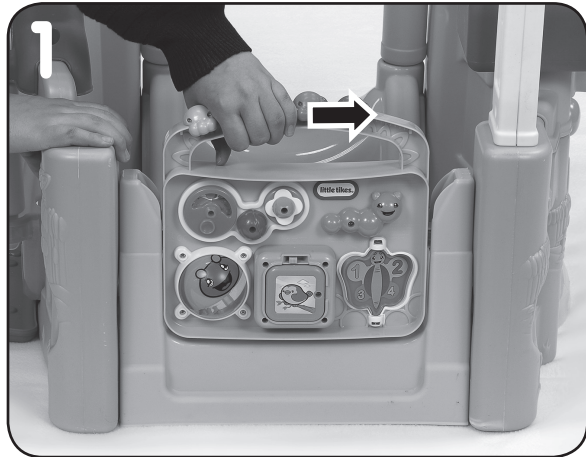

To remove play centre base, push play centre to one side.

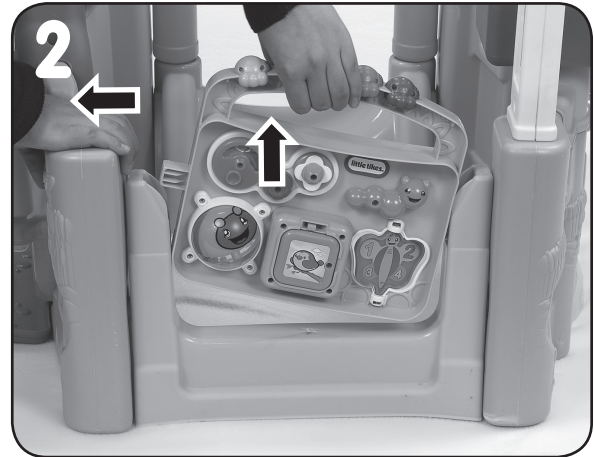


Pull upward on the opposite side to remove from the base.

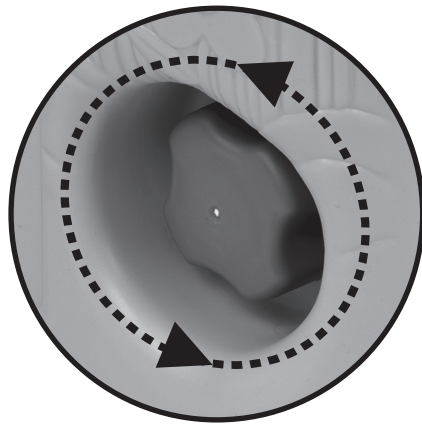

Unscrew and remove wall knobs located on each side of the base.



Pull walls apart and remove play centre base. Install new play centre base and secure with wall knobs.

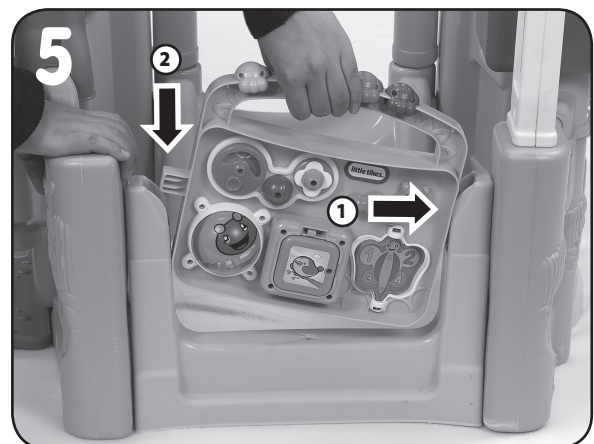

1. Insert play centre into wall.
2. Push opposite side down into base.

Please keep this manual as it contains important information.



© The Little Tikes Company, an MGA Entertainment company. Little Tikes® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

CONSUMER SERVICE TOLL-FREE NUMBER:

United States:
www.littletikes.com
1-800-321-0183 Monday - Friday
The Little Tikes Company
2180 Barlow Road
Hudson, OH 44236
E-mail: service@littletikescare.com
Printed in U.K.

United Kingdom:
www.littletikes.co.uk
Little Tikes
MGA Entertainment (UK) Ltd
50 Presley Way
Crownhill
Milton Keynes MK8 0ES
Bucks, UK
E-mail: Info.LittleTikes@mgae.com